



汽油机零部件图册

PARTS CATALOGUE

G200FA • G200FDA

G210FA • G210FDA



Version number: LC/LT-2016-A

隆鑫通用动力股份有限公司

LONCIN MOTOR CO.,LTD.

零件目录使用说明(Instruction for use of parts catalogue)

本零件目录是根据2016年1月所能得到的最新资料编制而成的。

This parts catalogue was prepared based on the latest information available as of January 2016.

请注意2016年1月以后本零部件目录的修订通知。

See the parts catalogue news for any revision that is made after January 2016.

当订购零件时，一定要明确指出其零件编号。

Always specify the part number when ordering a part.

注意本零件目录所给出的图形可能与实际零件外形有所不同。

Note that the illustrations can differ from the actual parts in shape.

当需要对零部件目录的内容进行更改或增加时，本公司将在适当的时间出版修订版，为保证在任何时候都可以使用到最新版本的零部件目录建议拥有最新的修订版本。如果要检查修订版本是否已经发行，请直接与LONCIN联系。

When modifications or additions to this parts catalogue are made , a revised edition will be issued at an appropriate time,

We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your LONCIN distributor.

缩写词

ASSY. 总成 COMP. 组合 R. 右 L. 左 A. C. 交流电 D. C. 直流电

IN. 进气 EX. 排气 FR. 前部 RR. 后部 HEX. 六角

Abbreviations


ASSY. Assembly COMP. Complete R. Right L. Left A. C. Alternating current

D. C. Direct current IN. Inlet EX. Exhaust FR. Front RR. Rear HEX. Hexagonal


“零件数量（Quantity）” 栏中数字表示该方框所述部分的数量。

The number given in the “Quantity.” column indicates the quantity of parts.


汽缸头(CYLINDER HEAD)

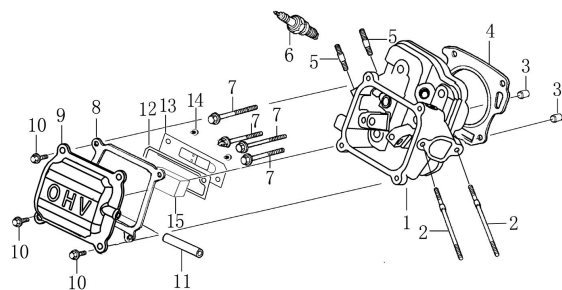


曲轴箱(CRANK CASE)

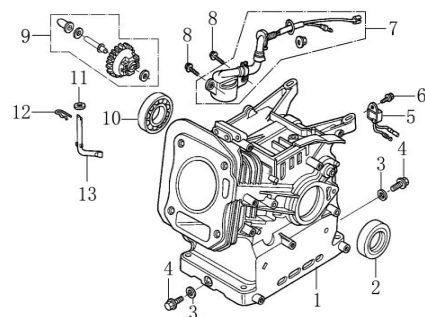


曲轴箱盖(CRANKCASE COVER)

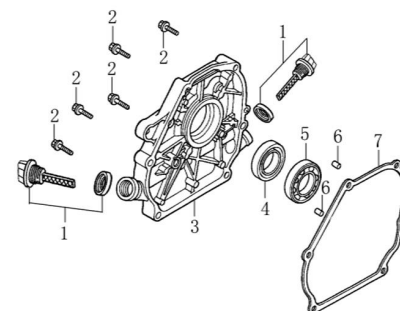


曲轴/活塞连杆(CRANKSHAFT/PISTON)

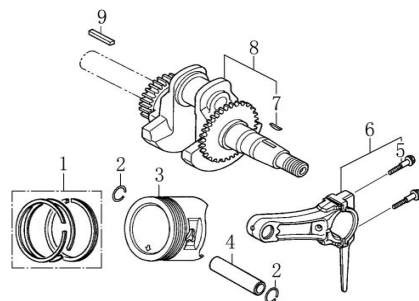


配气系统(GAS DISTRIBUTION ADJUSTMENT)

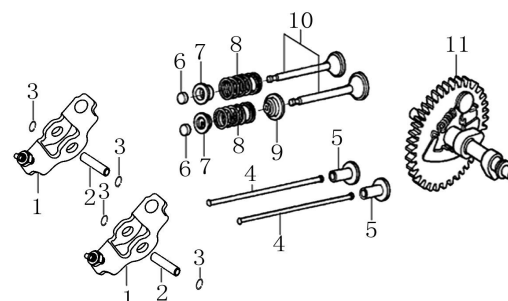


起动器部件(STARTER SUBASSEMBLY)

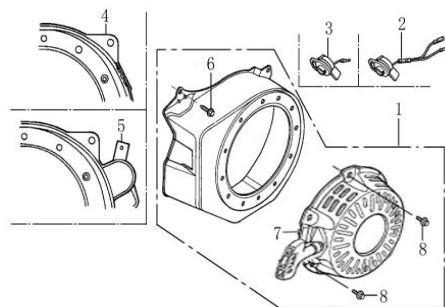


导风部件 (DIVERSION ASSY.)

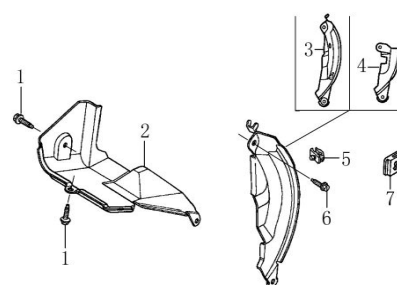


化油器(CARBURETOR)

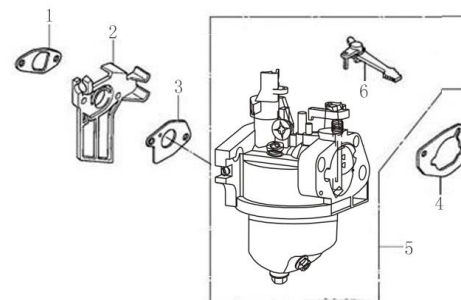


飞轮/点火线圈 (FLYWHEEL/COIL ASSY.)

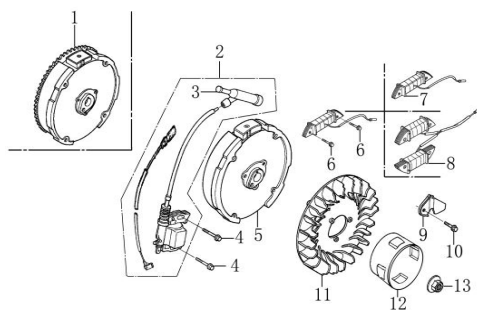


起动电机 (STARTER MOTOR)

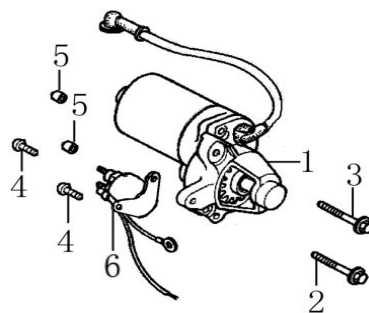


调速控制系统 (CONTROL SYSTEM)

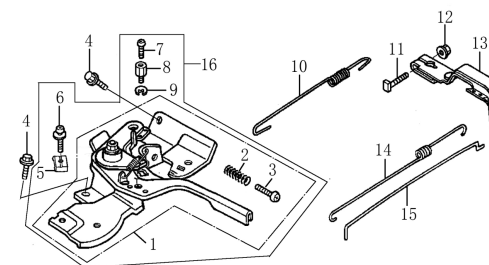


空滤器 (AIR CLEANER)

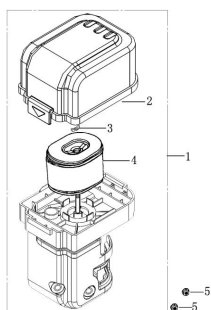


消音器 (MUFFLER)

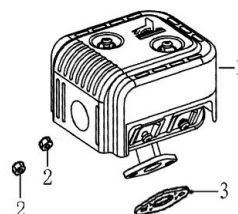

燃油箱 (FUEL TANK)

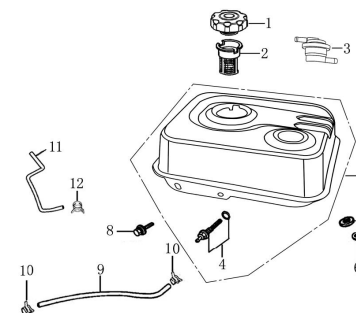


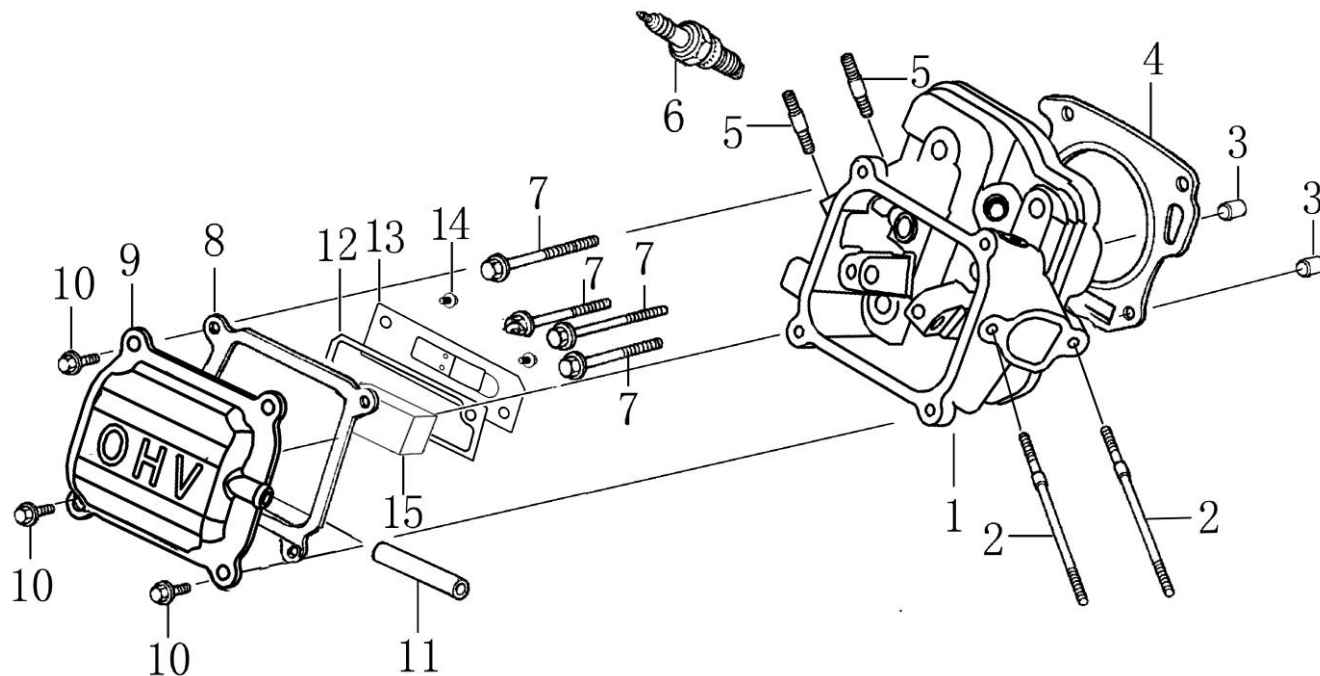

气缸头 (CYLINDER HEAD)


序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	120080532-T058	气缸头部件	HEAD COMP.,CYLINDER	1	1
2	380180093-T040	双头螺栓	BOLT,STUD,IN.	2	2
3	380600117-T040	定位销 $\phi 10 \times 14$	PIN , DOWEL	2	2
4	120150144-T040	气缸头密封垫	GASKET , CYLINDER	1	-
	120150193-T072	气缸头密封垫	GASKET , CYLINDER	-	1
5	380180098-T040	双头螺栓	BOLT , STUD , EX.	2	2
6	270960025-0001	火花塞	PLUG , SPARK	1	1
7	380140336-T040	六角头法兰面螺栓 8*60	BOLT , FLANGE , 8*60	4	4
8	120250043-T058	气缸头盖密封垫	PACKING , HEAD COVER	1	1
9	120230109-T058	气缸头盖组合	COVER COMP ., HEAD	1	1
10	380140215-T040	法兰面螺栓M6*14	BOLT , FLANGE , 6*14	4	4
11	380741044-T058	通气管	TUBE , BREATHER	1	1
12	110850018-T058	呼吸槽密封垫	PACKING, BREATHER CHAMBER	1	1
13	110840024-T058	呼吸槽盖板	CAP,BREATHER CHAMBER	1	1

[illegible]

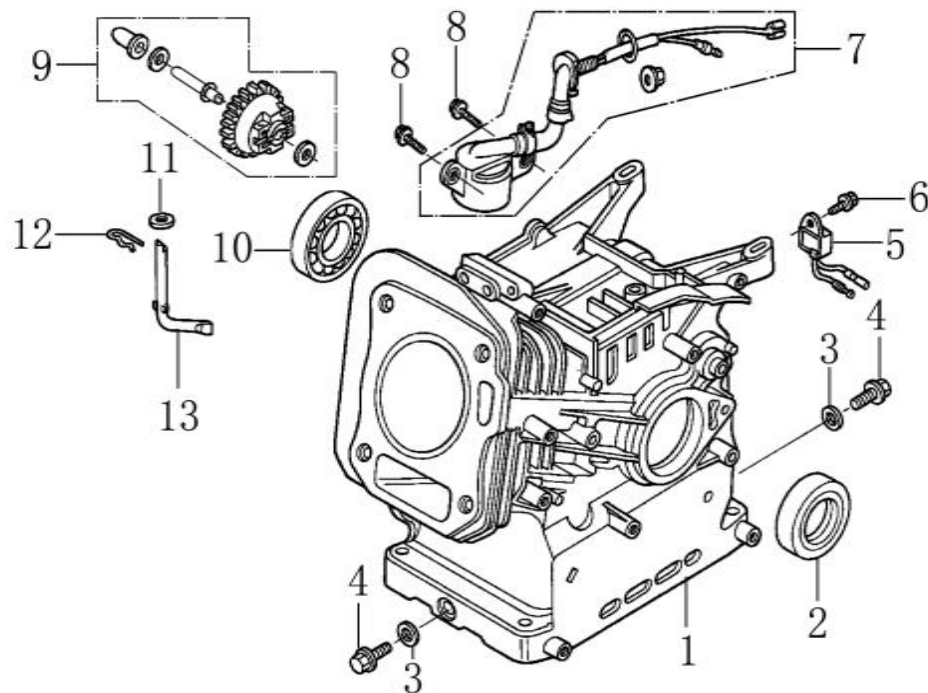


曲轴箱体(CRANK CASE)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	110810006-T050	曲轴箱体	CRANK CASE	1	-
	110810040-T070	曲轴箱体	CRANK CASE	-	1
2	380650347-T320	油封25×41.25×6	OIL SEAL 25×41.25×6	1	1
3	380450514-T040	平垫圈	WASHER,DRAIN PLUG	2	2
4	110260025-T040	密封螺栓	BOLT,DRAIN PLUG	2	2
5	281890001-T040	机油保护器	ALART UNIT,OIL	1	1
6	380140011-0004	螺栓 M6×10	BOLT,FLANGE , 6×10	1	1
7	281850150-T040	油位传感器	OIL LEVEL SWITCH	1	1
8	380140215-0003	法兰面螺栓 M6×14	BOLT,FLANGE , 6×14	2	2
9	171750002-T040	调速齿轮	GOVERNOR GEAR ASSY.	1	1
10	380630380-0001	轴承6205	BEARING , RADIAL BALL	1	1
11	380450531-T040	平垫圈	WASHER,PLAIN	1	1
12	381350004-T040	开口销	PIN,LOCK	1	1
13	171630001-T040	调速臂	SHAFT,GOVERNOR ARM	1	1

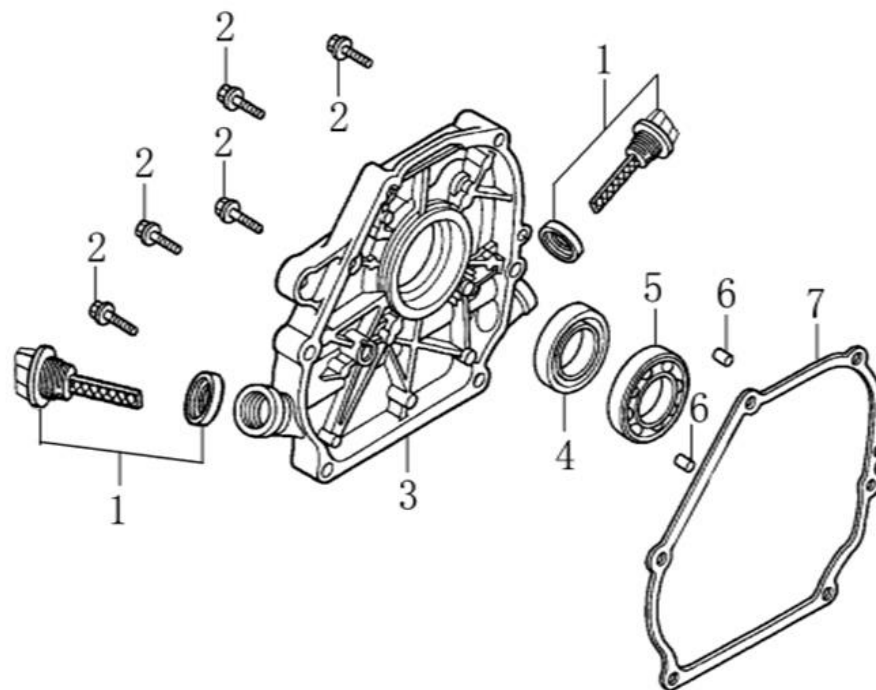


曲轴箱盖 (CRANK CASE COVER)

[illegible]

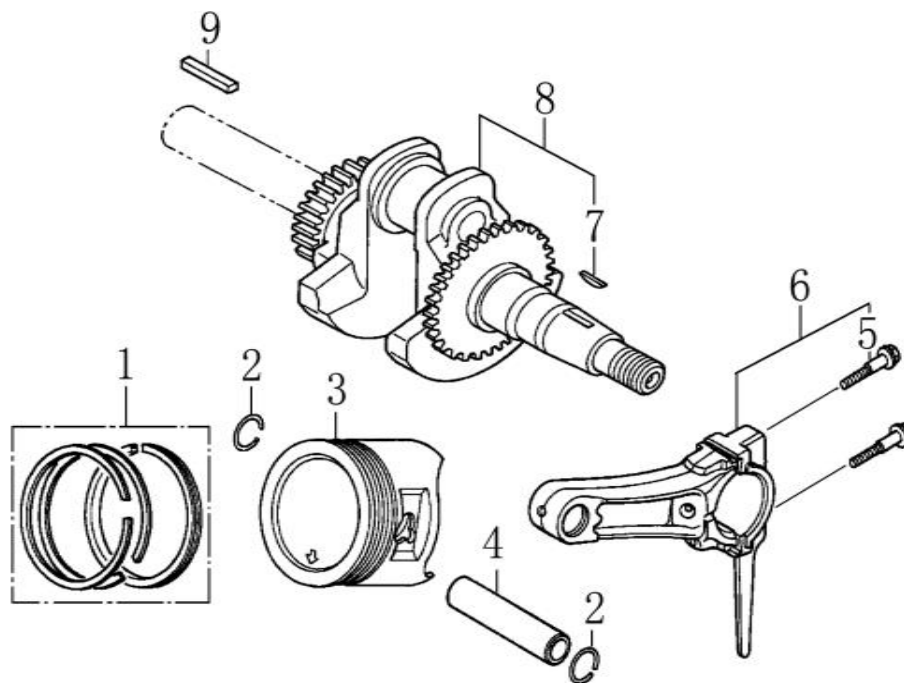


曲轴/活塞 (CRANKSHAFT/PISTON)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	130070168-T040	活塞环组合	RING SET	1	-
	130070187-T072	活塞环组合	RING SET	-	1
2	380560056-T040	钢丝挡圈	CLIP,PISTON PIN	2	2
3	130030188-T050	活塞	PISTON	1	-
	130030208-T072	活塞	PISTON	-	1
4	130060031-T040	活塞销	PIN,PISTON	1	1
5	130180001-T040	连杆螺栓	BOLT,CONNECTING ROD	2	2
6	130150039-T040	连杆	ROD ASSY.,CONNECTING	1	-
	130150054-T150	连杆	ROD ASSY.,CONNECTING	-	1
7	380620050-T040	半圆键	KEY	1	1
8	130290049-T050	曲轴部件	CRANKSHAFT COMP	1	-
	130290178-T150	曲轴部件	CRANKSHAFT COMP	-	1
9	380620030-T040	键	KEY	1	1

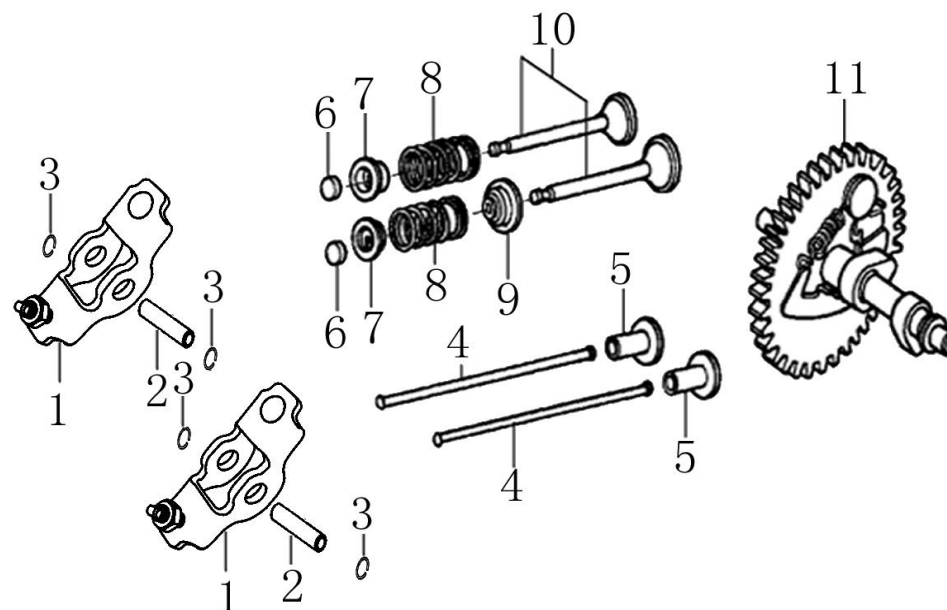


配气系统(GAS DISTRIBUTION ADJUSTMENT)


序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	140450056-T058	气门摇臂组合	ARM COMP.	2	2
2	140510049-T058	气门摇臂轴	VALVE ROCKER SHAFT	2	2
3	380570024-0003	开口挡圈	LOCKER	4	4
4	140670041-T058	推杆组合	ROD,PUSH	2	2
5	140690003-T050	挺柱	LIFTER VALVE	2	2
6	140320001-T040	气门调整帽	ROTATOR, VALVE	2	2
7	140380017-T040	气门弹簧座	RETAINER, VALVE SPRING	2	2
8	140340022-T040	气门内弹簧	SPRING , VALVE	2	2
9	140400016-T05K	挡油罩	SEAL, GUIDE	1	1
10	500550041-T150	气门套件	VALVE COMP.	1	1
11	140020114-T050	凸轮轴	CAMSHAFT ASSY.	1	1

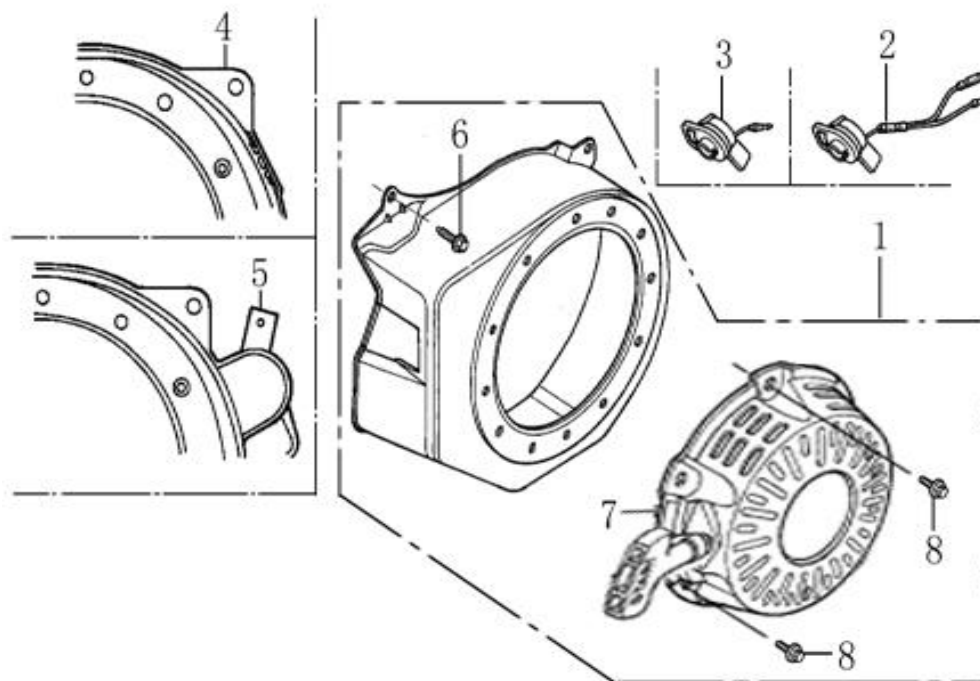

起动器组件 (STARTER SUBASSEMBLY)


序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	193490011-T040	手起动组件	RECOIL STARTER COMP.	1	-
	193490237-T072	手起动组件	RECOIL STARTER COMP.	-	1
2	271660028-T040	熄火开关	SWITCH ASSY.,ENGINE STOP(OIL ALERT)	1	1
3	271660027-T040	熄火开关	SWITCH ASSY., ENGINE STOP	1	1
4	160210005-T040	风扇罩部件	COVER COMP.,FAN	1	-
5	160210006-T073	风扇罩部件	COVER COMP.,FAN	-	1
6	380140011-T040	六角头法兰面螺栓 M6×10	BOLT,FLANGE 6×10	4	4
7	193500008-T040	手起动部件	STARTER ASSY.	1	-
	193500046-T150	手起动部件	STARTER ASSY.	-	1
8	380140531-0001	螺栓 M6×8	BOLT,FLANGE 6×8	3	4

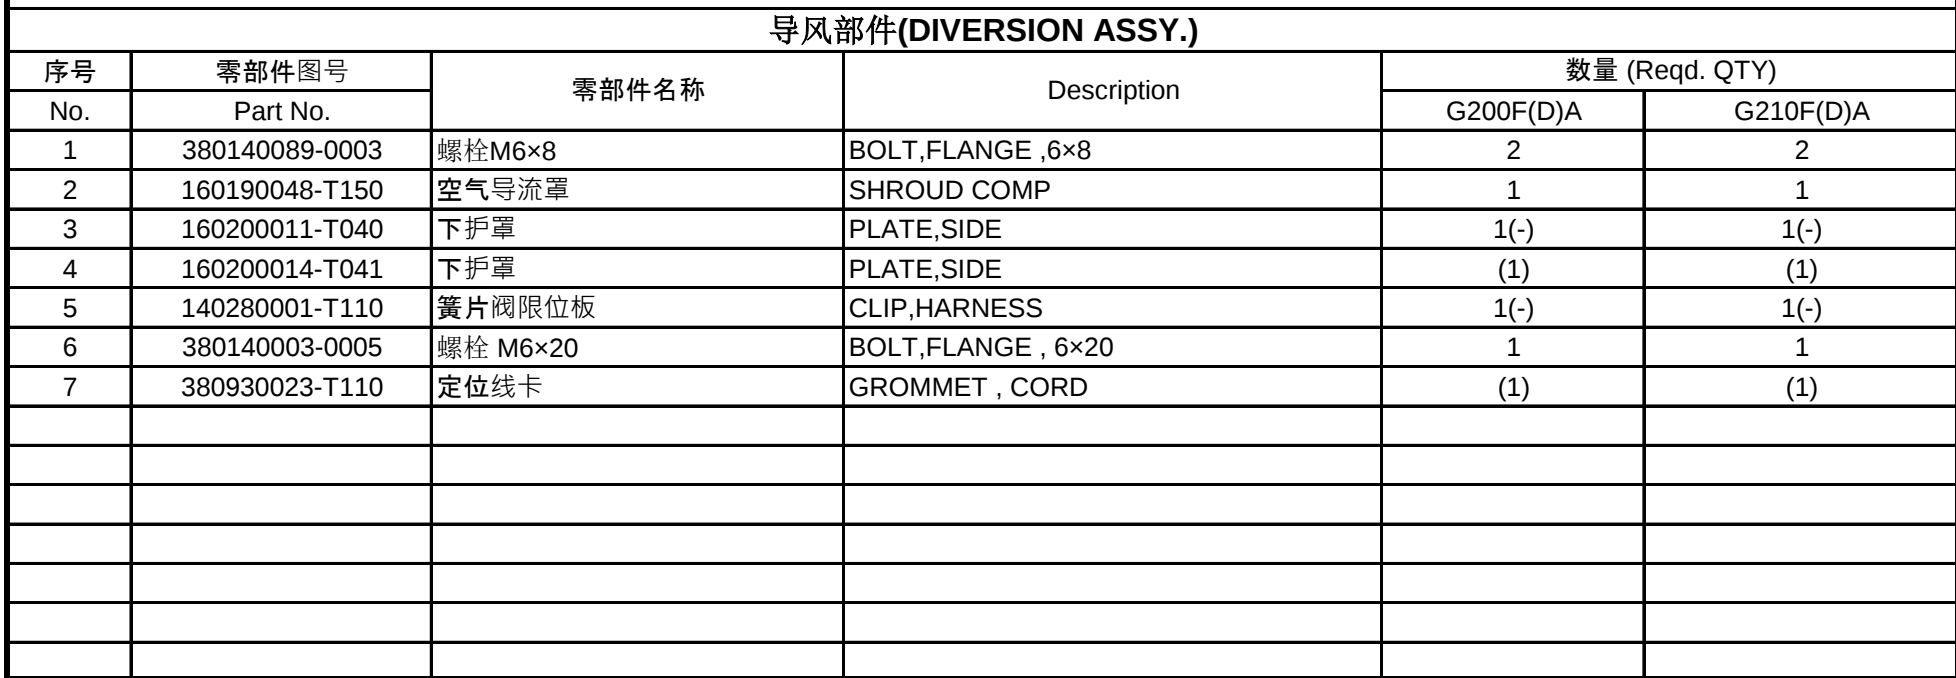

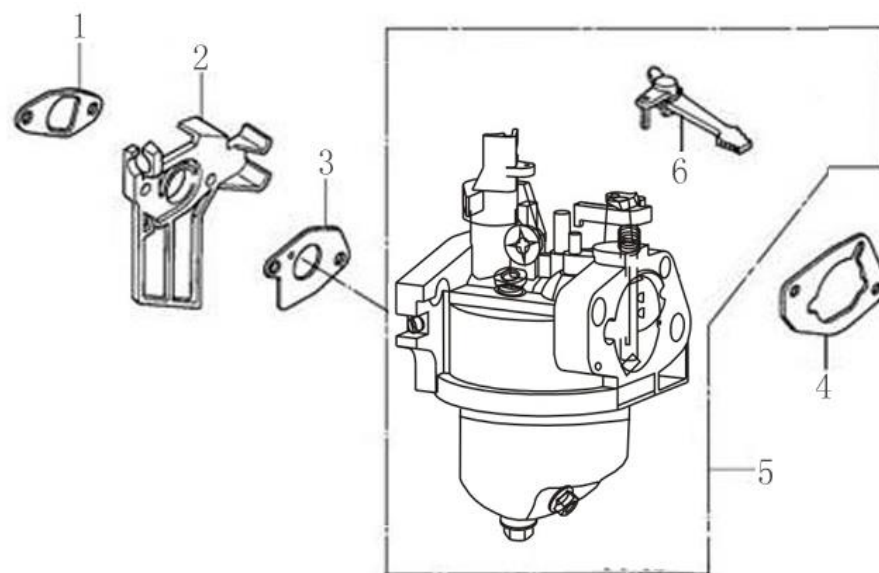


化油器 (CARBURETOR)

[illegible]

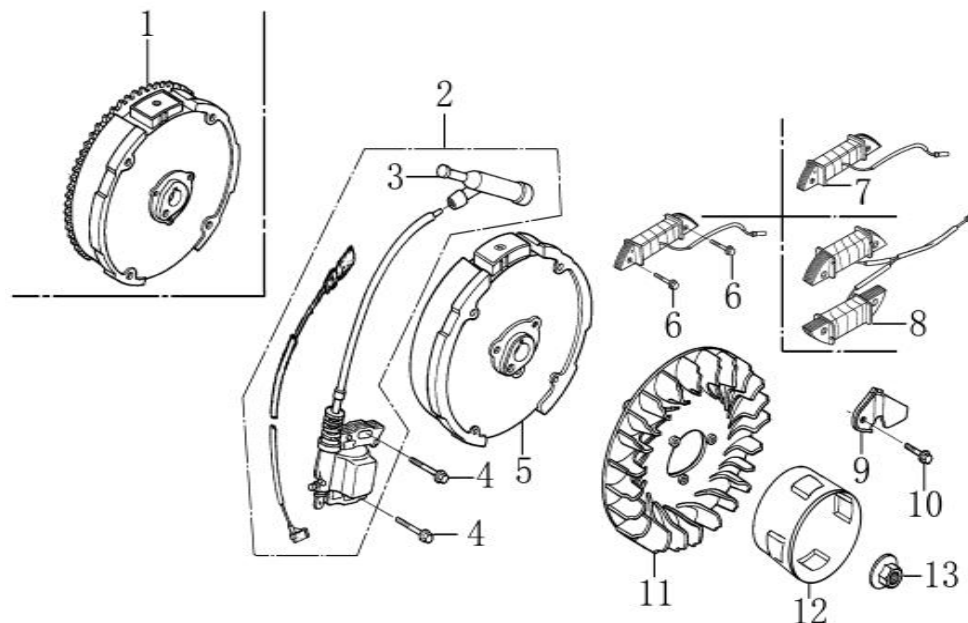


转子部件（飞轮）/点火线圈（FLYWHEEL/COIL ASSY.）

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	270020098-T041	磁电机转子部件	FLYWHEEL COMP	(1)	-
	270020140-T151	磁电机转子部件	FLYWHEEL COMP	-	(1)
2	270920162-T040	点火线圈(点火器)	COIL ASSY.,IGNITION	1	1
3	270950040-T040	火花塞帽	CAP ASSY.,NOISE SUPPRESSOR	1	1
4	380140102-0004	法兰面螺栓 M6×25	BOLT,FLANGE,6×25	2	2
5	270020097-T040	磁电机转子部件	FLYWHEEL COMP	1(-)	-
	270020139-T150	磁电机转子部件	FLYWHEEL COMP	-	1(-)
6	380140102-0004	六角头法兰面螺栓M6X25	BOLT,FLANGE,6×25	(2)	(2)
7	270190018-T111	充电线圈部件	COIL ASSY.,CHARGE	(1)	(1)
8	270190003-T111	充电线圈部件	COIL ASSY.,CHARGE	(1)	(1)
9	270280006-T041	线束压板	CLAMPER,CORD	(1)	(1)
10	380140089-0003	六角法兰面螺栓 M6×8	BOLT,FLANGE,6×8	(1)	(1)
11	160180007-T040	叶轮	FAN,COOLING	1	-
	160180023-T150	叶轮	FAN,COOLING	-	1

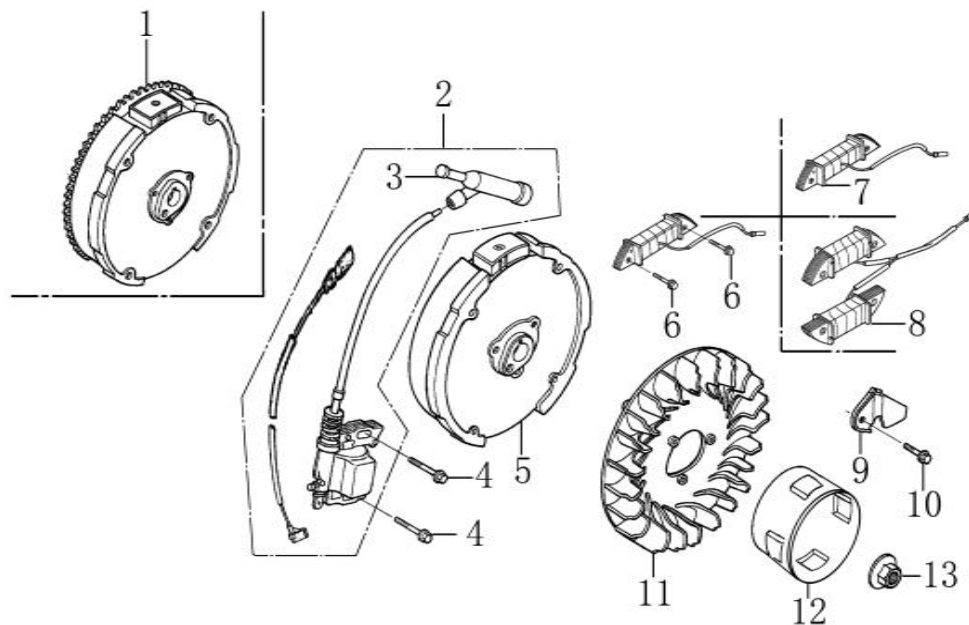


转子部件 (飞轮) / 点火线圈 (FLYWHEEL/COIL ASSY.)

[illegible]

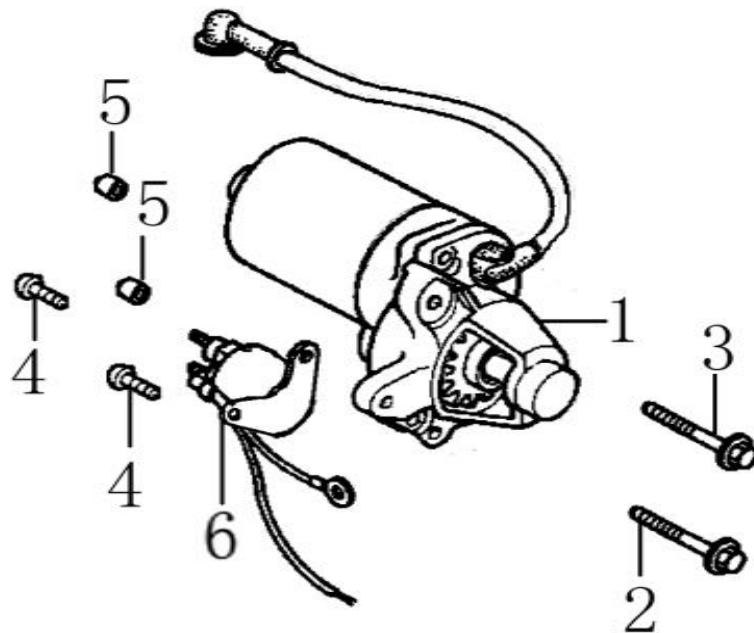

起动电机 (STARTER MOTOR)


[illegible]

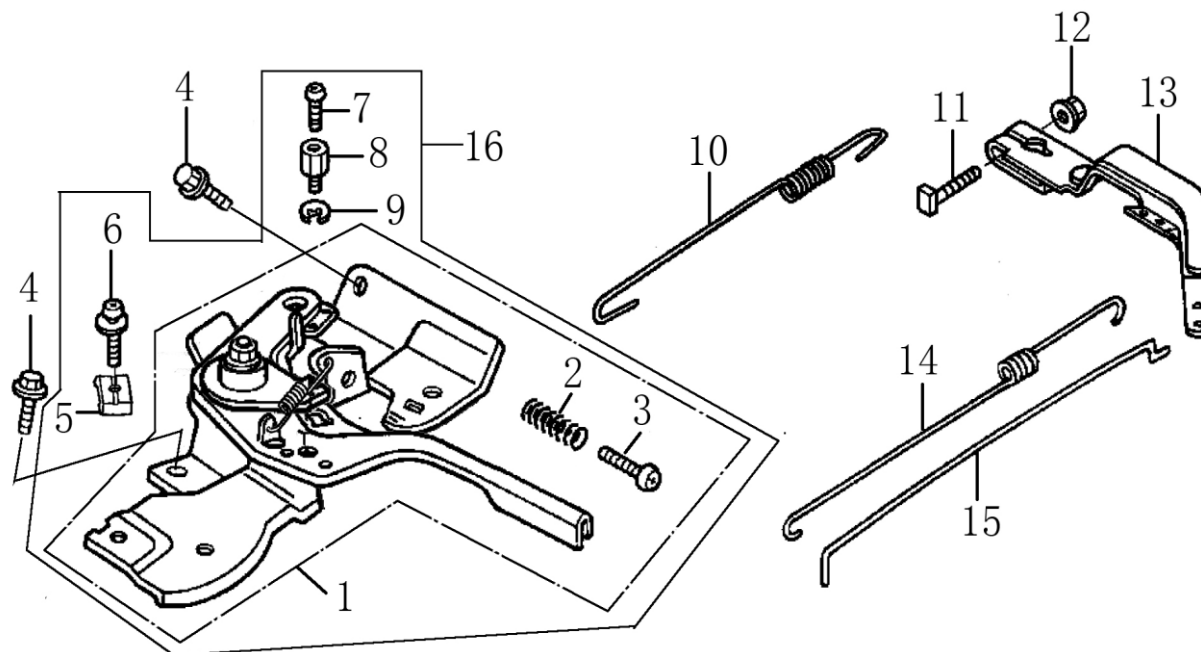

调速控制系统 (CONTROL SYSTEM)


序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	171680006-T040	油门操纵手柄组合	CONTROL ASSY.	1	1
2	171660001-T040	限位调节弹簧	SPRING	1	1
3	380200017-T040	十字槽盘头螺钉	SCREW , 5×35	1	1
4	380140011-0004	六角法兰面螺栓M6×10	BOLT, FLANGE	2	2
5	171710004-T040	拉索压板	HOLDER, CABLE	1	1
6	380200010-0005	十字槽盘头螺钉	SCREW , 5×25	1	1
7	380200037-0003	十字槽盘头螺钉	SCREW , 4×6	1	1
8	171720001-0001	拉索卡	HOLDER, WIRE	1	1
9	380570018-0002	开口挡圈	CIRCLIP	1	1
10	171600037-T040	调速弹簧(拉簧A)	SPRING, GOVERNOR	1	1
11	380250002-T040	调速支架固定(方头)螺栓	BOLT, QUADRATE HEAD M6×21	1	1
12	380370066-0001	六角法兰面螺母M6	NUT, FLANGE	1	1
13	171620001-T040	调速支架	ARM, GOVERNOR	1	1
14	171610002-T040	调速弹簧(拉簧B)	SPRING, THROTTLE RETURN	1	1

[illegible]

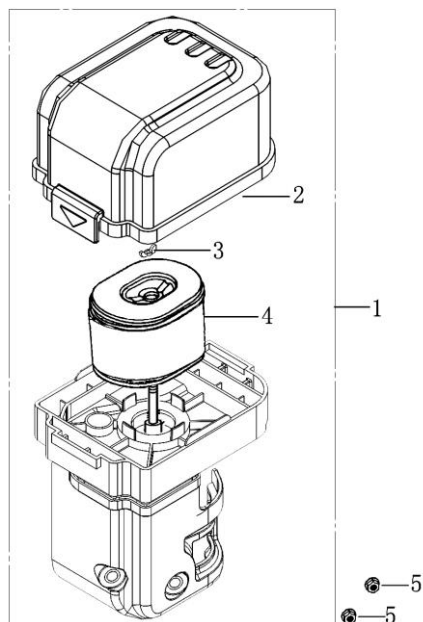


空濾器 (AIR CLEANER)

[illegible]

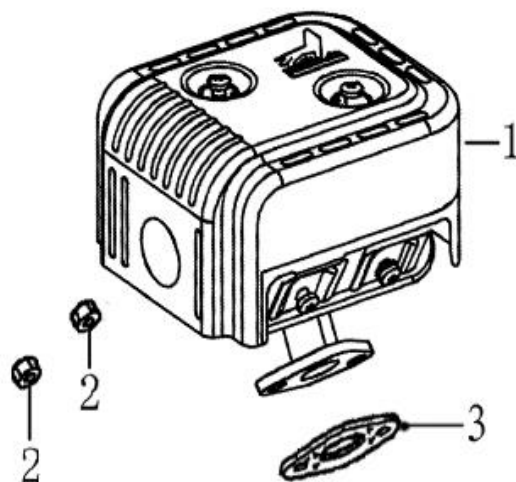

消音器 (MUFFLER)

[illegible]

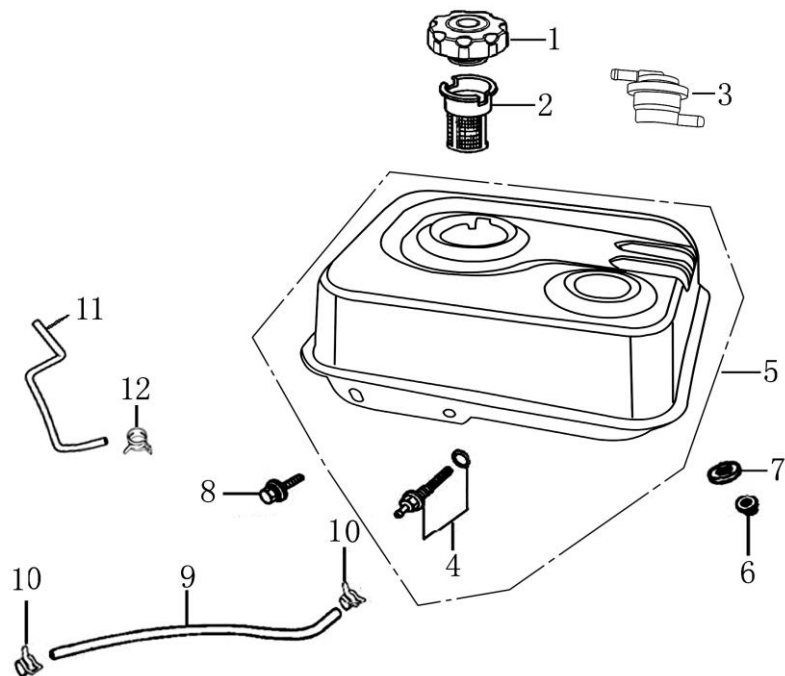

燃油箱 (FUEL TANK)

序号 No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. QTY)	
				G200F(D)A	G210F(D)A
1	170870118-T116	油箱盖	CAP COMP.,FUEL FILLER	1	1
2	170720009-T056	注油口滤网组合	FILTER,FUEL	1	1
3	172830008-T040	油箱通气阀	GAS VALVE,FUEL TANK	1	1
4	170660077-T040	油箱出油嘴	JOINT ASSY.,FUEL TANK	1	1
5	170500988-T058	油箱部件	TANK COMP.,FUEL	1	1
6	380370048-0001	六角法兰面螺母	NUT,FLANGE, 6MM	2	2
7	380920086-T040	橡胶平垫	WASHER,RUBBER	2	2
8	380140171-0004	六角头法兰面螺栓	BOLT,FLANGE	1	1
9	380750597-T09J	油管 4×9.6×165	TUBE,FUEL	1	1
10	380960170-0002	卡箍组合	LOOP,TUBE	2	2
11	181940042-T058	炭罐联接管	PIPE	1	1
12	380960121-0005	卡箍组合	LOOP,TUBE	1	1



隆鑫通用动力股份有限公司

Loncin motor co., Ltd.

详细地址：重庆市九龙坡区九龙工业园区华龙大道99号

Add: No. 99 Hualong Road, Jiulongpo District, Chongqing, China

Tel: 86 23 8980 5678 / 86 23 8980 8505

Fax: 86 23 8906 7566

Email: service@loncinengine.com

Website: www.loncinengine.com

PRINTED IN CHINA