

956 Chainsaw



Documents

Engine and starter

Crankcase and chain brake

Tank and air filter

Carburetor HDA-160F

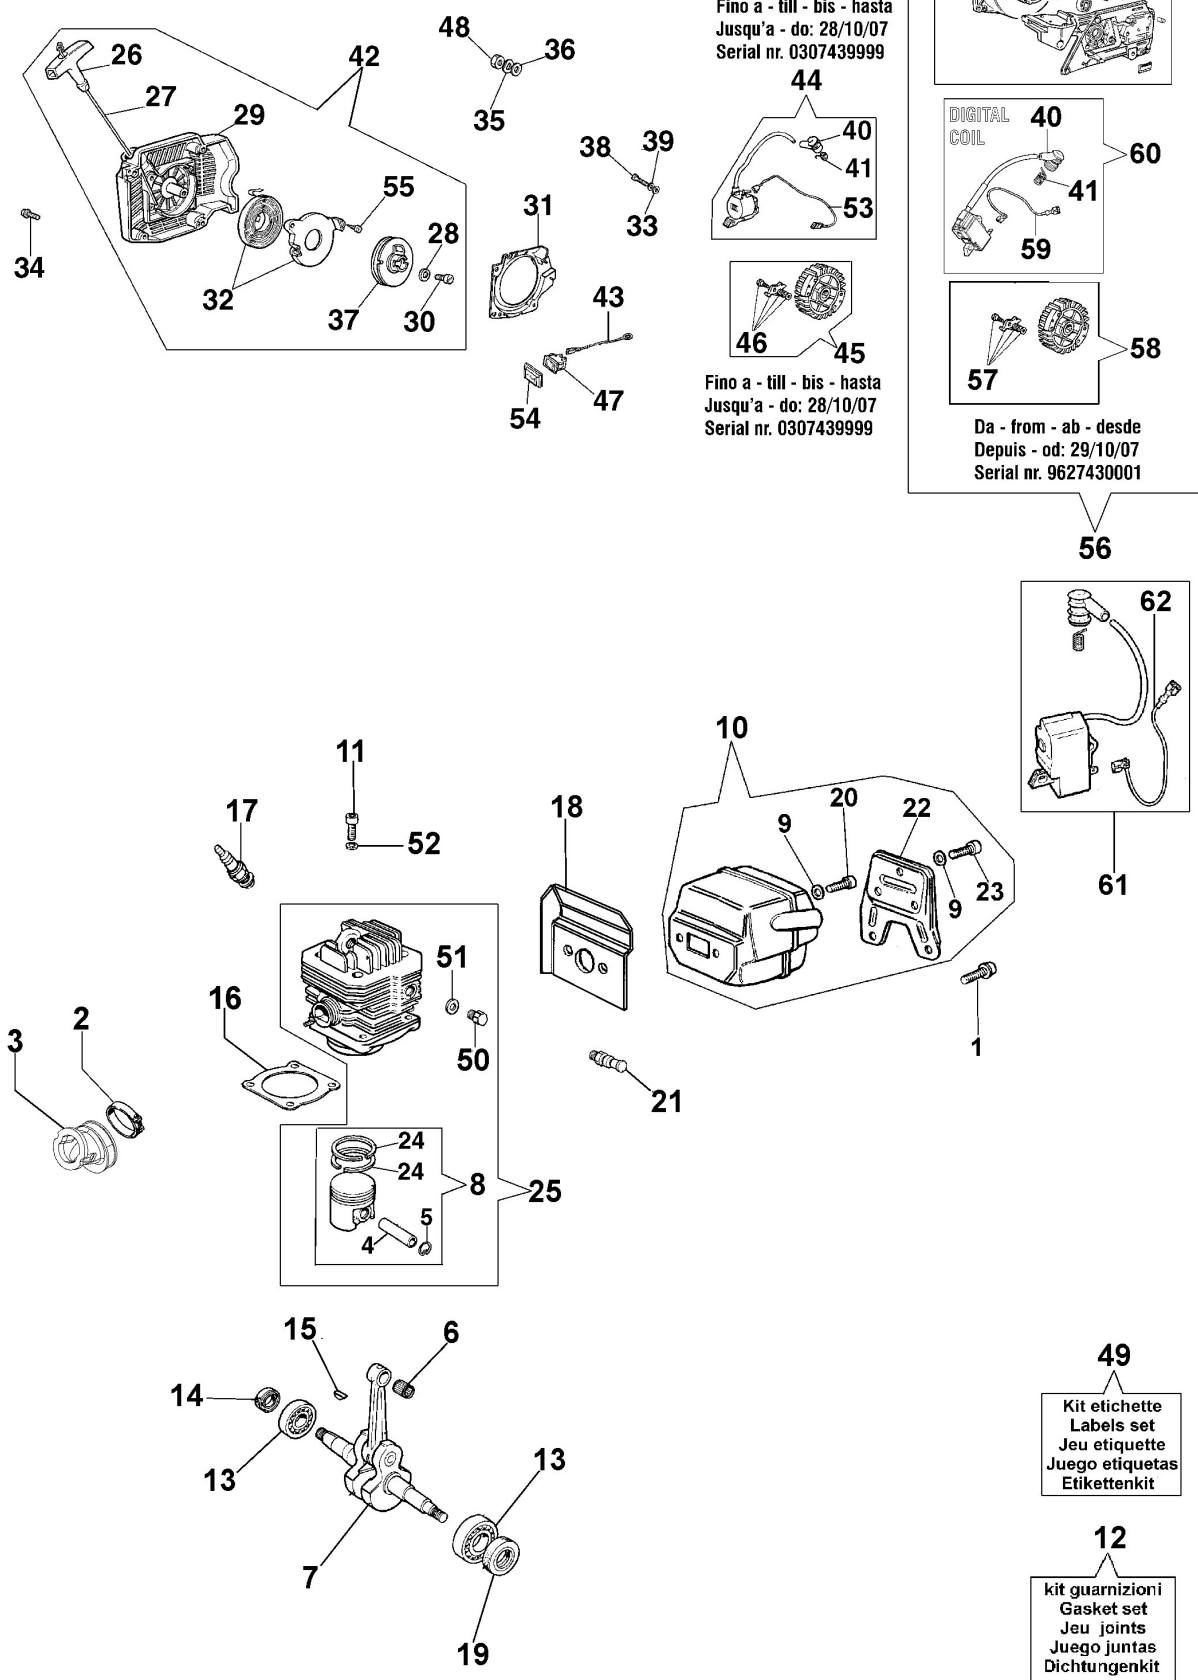


Illustration Engine and starter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	097000092AR	Screw				
2	1	50200015AR	Band				
3	1	50010026R	Manifold				
4	1	50010031R	Piston pin				BT4-125-05/07
5	2	007201198R	Ring				BT4-125-05/07
6	1	3037014R	Bearing				
7	1	50010115R	Crankshaft				
8	1	50012024	Piston assy		SN 0306361391		BT4-125-05/07
8	1	50010320	Piston assy	SN 0306361392			BT4-125-05/07
9	2	3033074	Washer				
10	1	50022044R	Muffler				
11	4	005100906AR	Screw				
12	1	50012052B	Gasket set				
13	2	3034012R	Bearing				
14	1	094500004R	Seal ring				
15	1	094500028R	Key				
16	1	50010046DR	Gasket				
17	1	3055114R	Spark plug				
18	1	50010058AR	Gasket				
19	1	007201313R	Seal ring				
20	2	3801045R	Screw				
21	1	50010215R	Decompressor				
22	1	50010145R	Cover				
23	3	3801052R	Screw				
24	2	50010033R	Piston ring				BT4-125-05/07
25	1	50012095B	Cylinder				BT4-125-05/07
26	1	097000064AR	Starter handle				
27	1	098000079R	Starter rope				
28	1	3918006R	Washer				
29	1	50010172BR	Starter case				
30	1	3908036R	Screw				
31	1	50010019AR	Flange				
32	1	098000060AR	Spring				
33	2	3916004R	Washer				
34	4	097000092AR	Screw				
35	1	3833080R	Washer				
36	1	3916009R	Washer				
37	1	52010439CR	Pulley				BT4-119-10/06
38	2	094000227	Screw				
39	2	006000315R	Washer				
40	1	094600097AR	Spark plug cap				
41	1	094600169AR	Spring				
42	1	50012069DR	Starter assy				
43	1	097000121AR	Cable				

Illustration Engine and starter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
44	1	50020007BR	Ignition coil				BT4-129-01/08
45	1	52020061R	Flywheel				BT4-129-01/08
46	1	52012027	Pawl kit				BT4-129-01/08
47	1	2317021R	Switch				
48	1	004000142R	Nut				
49	1	50012074	Labels kit				
50	1	52010093	Screw				BT4-125-05/07
51	1	3078012	Washer				BT4-125-05/07
52	4	3833076R	Washer				
53	1	097000122AR	Cable				BT4-129-01/08
54	1	2317013R	Guard				
55	2	3960017AR	Screw				
56	1	50010342C	Crankcase				BT4-129-01/08
57	1	52012027	Pawl kit				BT4-129-01/08
58	1	50010331BR	Flywheel				BT4-129-01/08
59	1	50020073R	Cable				BT4-129-01/08,
60	1	50020061AR	Ignition coil				BT4-129-01/08,
61	1	50020061AR	Ignition coil				BT4-135-07/09, BT4-125-04/09
62	1	50020073R	Cable				BT4-135-07/09

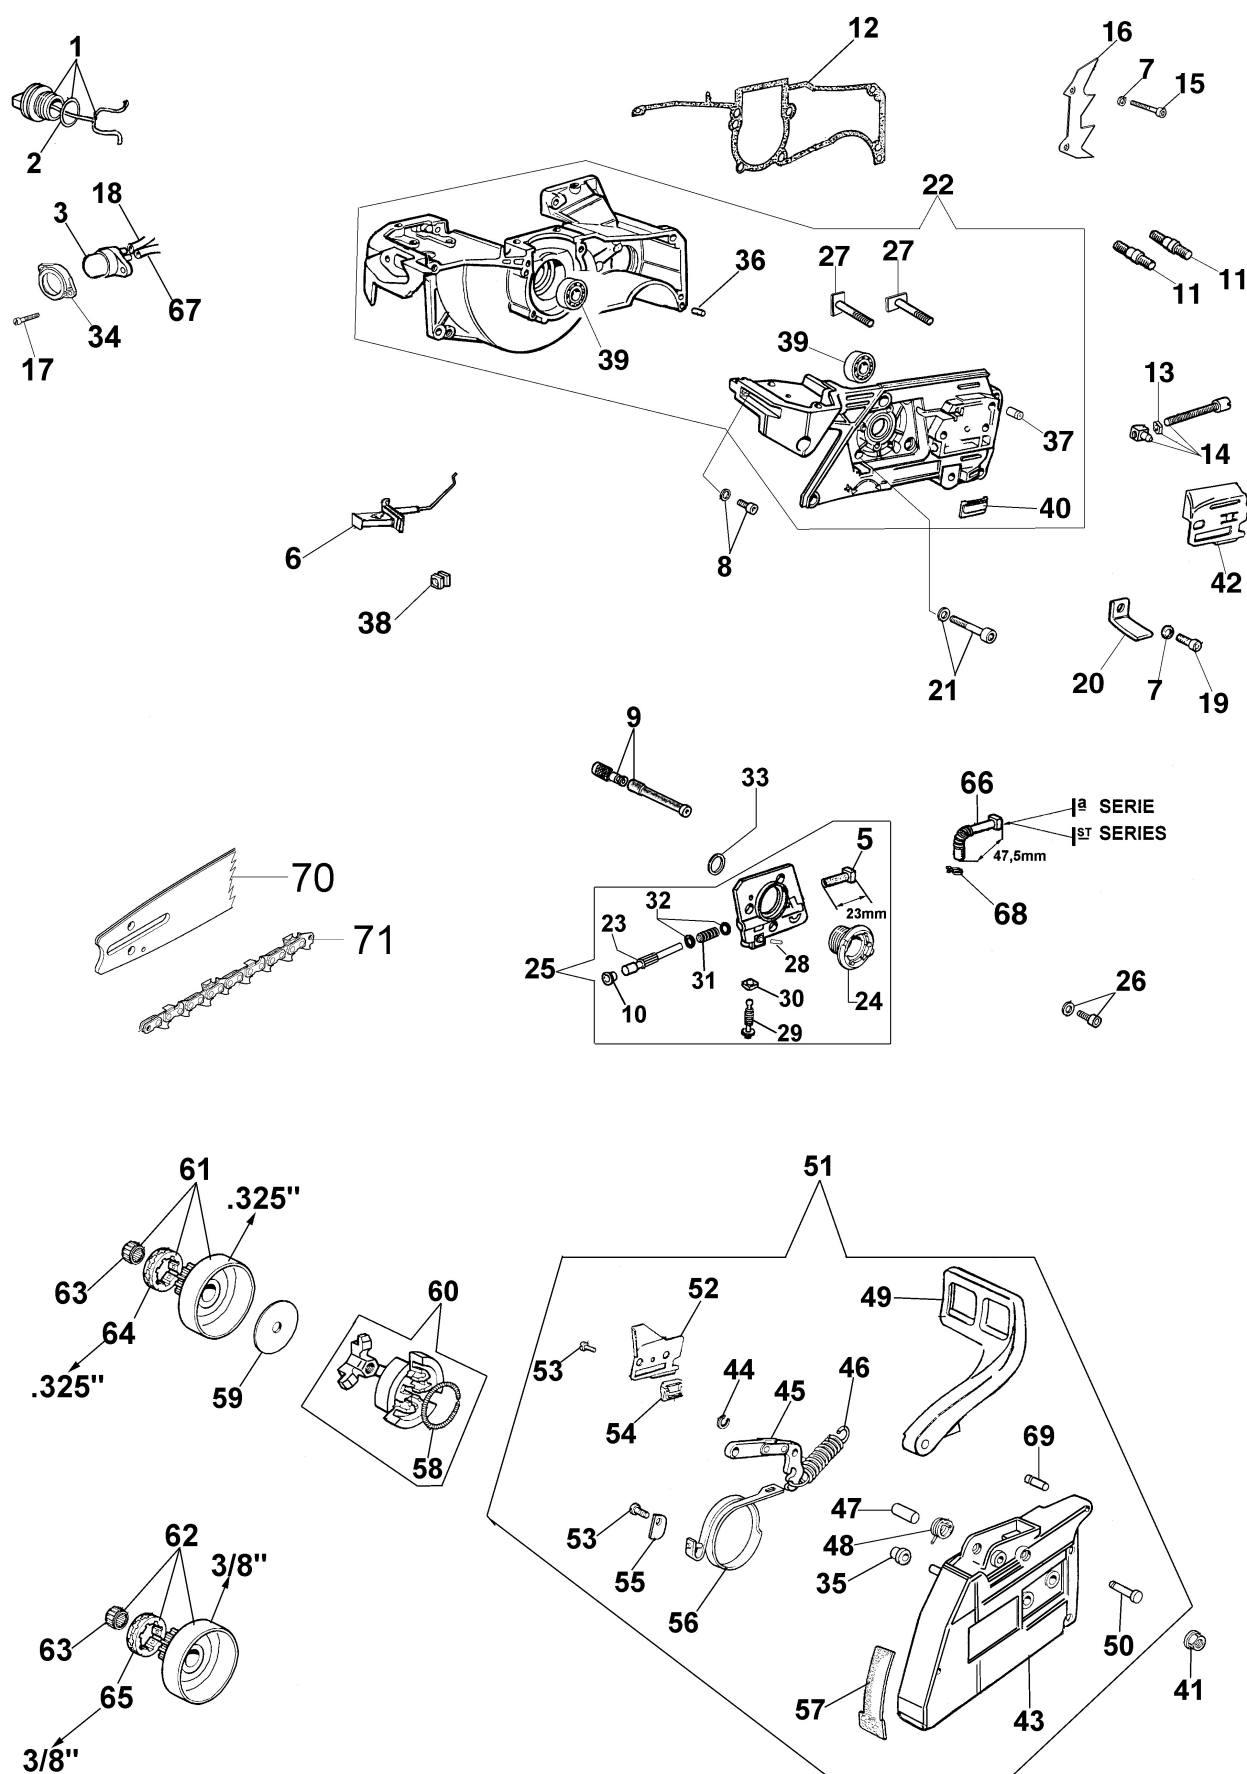


Illustration Crankcase and chain brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50012009R	Cap				
2	1	099900090R	Ring				
3	1	50010032R	Air purge				
5	1	50010163R	Tube				
6	1	50010065R	Starter lever				
7	8	3833073R	Washer				
8	1	093800060B	Screw				
9	1	097000147AR	Oil suction				
10	1	097000078	Cap				
11	2	094500141AR	Stud				
12	1	50010047AR	Gasket				
13	1	50010079	Clamp				
14	1	50010151	Chain tensioner				
15	4	006100303R	Screw				
16	1	50010050BR	Spike				
17	1	3960106R	Screw				
18	1	3073007R	Tube				
19	1	006000251R	Screw				
20	1	50250226R	Clamp				
21	4	3801035	Screw				
22	1	50010346C	Crankcase				BT4-129-01/08
23	1	097000069B	Piston pump				
24	1	50010036AR	Worm gear				BT4-120-11/06
25	1	50012138	Oil pump				BT4-120-11/06
26	3	006000024R	Screw				
27	2	50010301R	Screw				
28	1	097000062	Plug				
29	1	50010037	Screw				
30	1	097000068	Clamp				
31	1	097000071A	Spring				
32	2	097000070	Washer				
33	1	50010044	Washer				
34	1	50010175	Guard				
35	1	006000300	Bushing				
36	1	3023008R	Plug				
37	1	097000229R	Breather valve				
38	1	097000057R	Grommet				
39	2	3034012R	Bearing				
40	1	50070149R	Guard				
41	2	50010148R	Nut				
42	1	50010010AR	Plate				
43	1	50012003DR	Chain cover				BT4-133-10/08
44	1	3026003R	Ring				
45	1	097000146	Lever				

Illustration Crankcase and chain brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
46	1	099900152AR	Spring				
47	1	097000107	Plug				
48	1	50010088AR	Spring				
49	1	50010040R	Guard				
50	1	097000106R	Plug				
51	1	50012002DR	Chain cover				BT4-133-10/08
52	1	50070124AR	Plate				
53	1	3960045	Screw				
54	1	50070149R	Guard				
55	1	50010084	Plate				
56	1	50010039R	Brake band				
57	1	50010353R	Deflector				BT4-133-10/08
58	1	004900137BR	Spring				
59	1	375100012AR	Washer				
60	1	50012023AR	Clutch				
61	1	50012050	Clutch drum				
62	1	50022034	Clutch drum				
63	1	3037016R	Bearing				
64	1	094500046R	Ring				
65	1	006100730R	Ring				
66	1	50010060	Oil line				
67	1	61290089R	Breather fuel pipe				
68	1	3059003	Band				
69	1	50010243R	Pin				
70	1	50022009R	Bar 16 - cm 41				
70	1	50022010R	Bar 18" - 46 cm				
70	1	50022011R	Bar 20" - 51 cm				
70	1	50012037R	Bar 20" - 51 cm				
70	1	50012036R	Bar 18" - 46 cm				
70	1	50012035R	Bar 16" - 41 cm				
71	1	001000453R	Chain .3/8 x .058 (1.5mm) - 60 links				
71	1	30629001A	Chain .3/8" x .058" (1,5mm) - 68 links				
71	1	30629002A	Chain .3/8" x .058" (1,5mm) - 72 links				
71	1	30629008A	Chain .325" x .058" (1,5mm)				
71	1	30629007A	Chain .325" x .058" (1,5mm) - 72 links				
71	1	001000710R	Chain .325" x .058" (1,5mm)				


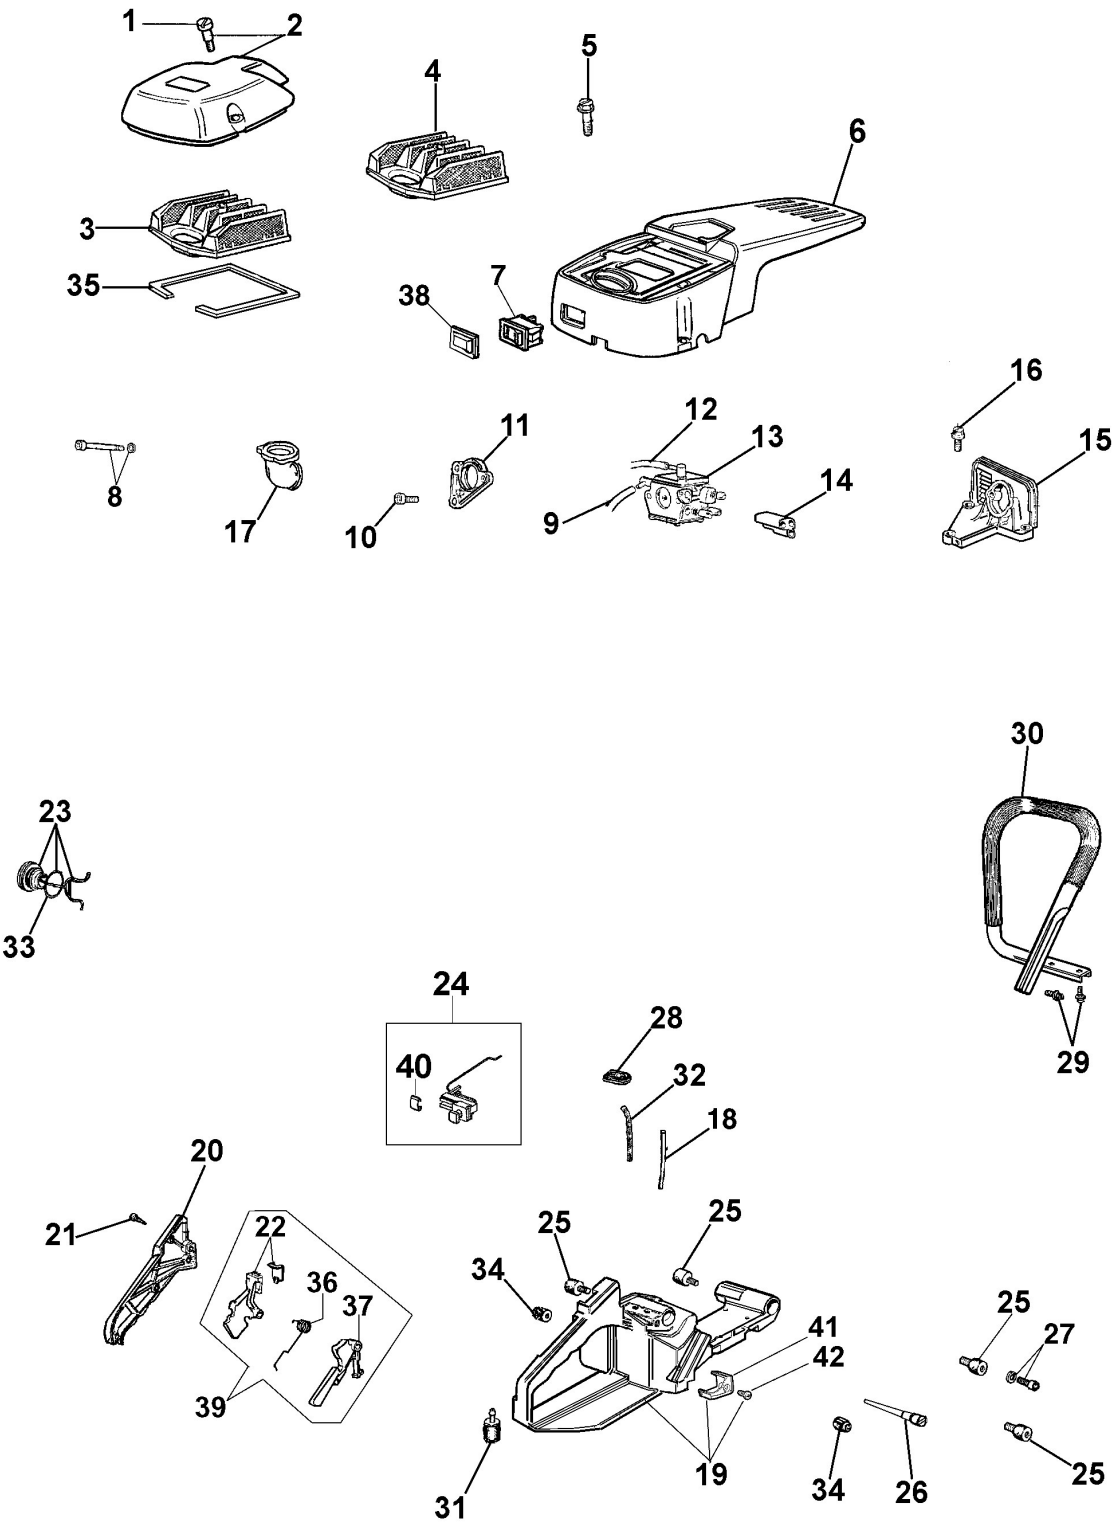


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	093000468AR	Screw				
2	1	50010121AR	Cover				
3	1	50010367R	Air filter				BT1-019-07/07
4	1	098000092R	Air filter nylon				BT1-019-07/07
5	1	099900296R	Screw				
6	1	50022055R	Cover				
7	1	2317021R	Switch				
8	2	61052009BR	Screw				
9	1	098000319AR	Tube				
10	3	3893060R	Screw				
11	1	50010028R	Flange				
12	1	094000215AR	Tube				
13	1	50010302A	Carburetor kit HDA-160C				
14	1	50010125	Screw guide				
15	1	50010017R	Support				
16	3	097000092AR	Screw				
17	1	50010027R	Manifold				
18	1	61290089R	Breather fuel pipe				
19	1	50020097HR	Fuel tank	SN 9621040001			BT4-136-07/09, BT4-147-02/11
20	1	50010024BR	Cover				
21	1	3960040R	Screw				
22	1	50010157	Throttle lever				
23	1	50012008R	Cap				
24	1	52022048A	Throttle rod				BT4-136-07/09
25	4	097000038AR	AV-mount				
26	1	099900083BR	Breather valve				
27	8	006000251R	Screw				
28	1	50010029R	Grommet				
29	1	097000061AR	Screw				
30	1	50020016R	Handle				
31	1	50010218R	Fuel filter				
32	1	098000319AR	Tube				
33	1	099900090R	Ring				
34	2	50010061R	AV-mount				
35	1	097000056R	Gasket				
36	1	097000028R	Spring				
37	1	097000025AR	Lever				
38	1	2317013R	Guard				
39	1	097000216B	Throttle kit				
40	1	52010134R	Plate				BT4-136-07/09
41	1	50250025R	Guard	SN 9621040001		Arancio; Orange	BT4-147-02/11
42	1	3960098R	Screw	SN 9621040001			BT4-147-02/11

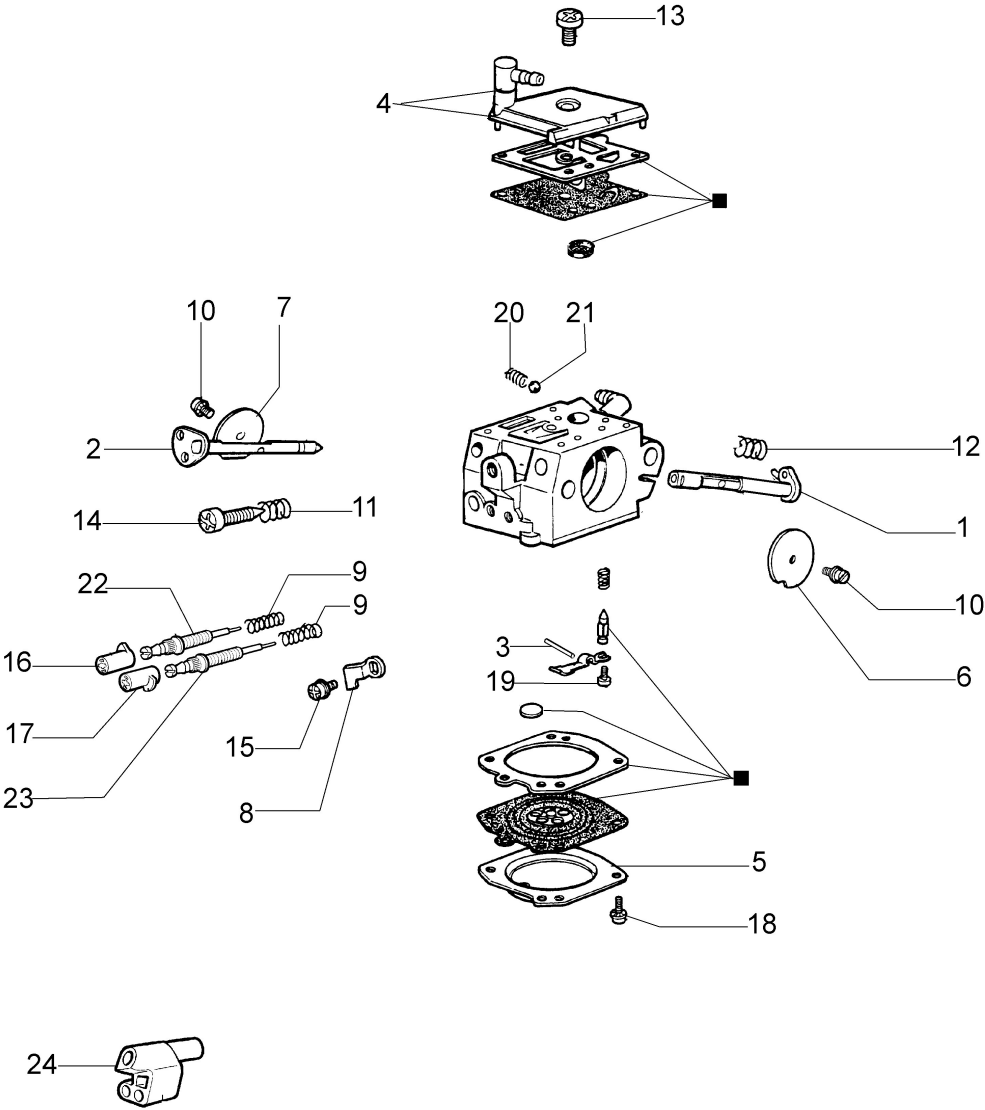

26 ■ Kit riparazione
Repair kit

Illustration Carburetor HDA-160F

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010095	Shaft				
2	1	50010096	Shaft				
3	1	003300201	Spindle				
4	1	50010097	Cover				
5	1	50010098	Cover				
6	1	50010099	Shutter				
7	1	50010100	Shutter				
8	1	50010101	Clamp				
9	1	095000147	Spring				
10	2	035000160	Screw				
11	1	094600148	Spring				
12	1	50010106	Spring				
13	1	50010109	Screw				
14	1	074000240	Adjust. screw				
15	1	003300209	Screw				
16	1	2318694	Cap				
17	1	2318695	Cap				
18	1	035000162	Screw				
19	1	003300202	Screw				
20	1	095000146	Spring				
21	1	094600143	Ball				
22	1	2318782	Screw H				
23	1	2318781	Screw L				
24	1	50010125	Screw guide				
26	1	2318673	Repair kit				